



FITTING INSTRUCTIONS - NOTICE DE POSE - MONTAGE HANDLEIDING - MONTAGEANLEITUNG ISTRUZIONI DI MONTAGGIO - INSTUCCIONES DE MONTAJE


Tools required

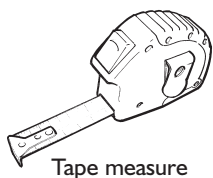


Tape measure

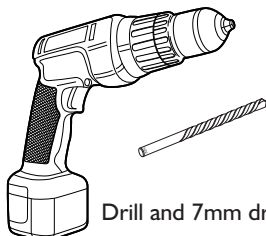


Drill and 7mm drill bit

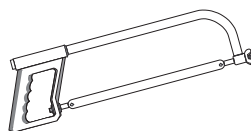


Hacksaw

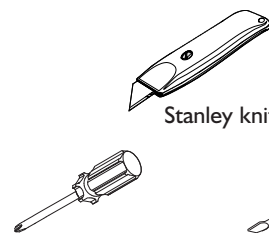

Stanley knife




Posidrive screwdriver




Flat blade screwdriver


Contents of kit

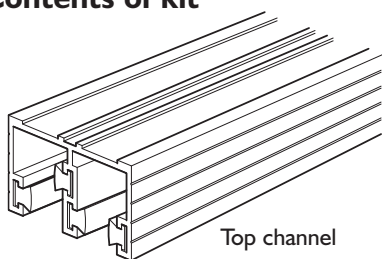


Top channel

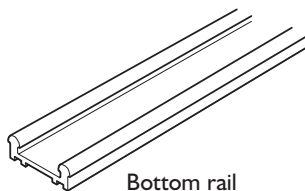


Bottom rail

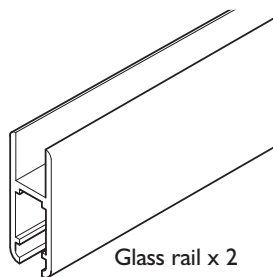


Glass rail x 2

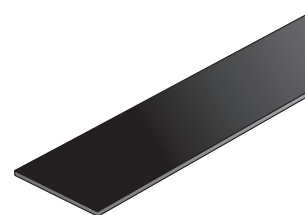

Seal x 2



End cap x 4

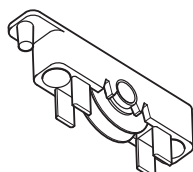

Bottom roller x4




Screw A x 12
(12mm countersunk)




Screw B x 8
(8mm domehead)

Optional components

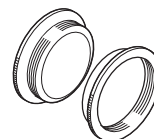


Finger pull
(27)

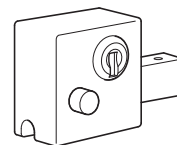



Door lock
left hand (507LH)
or right hand (507RH)

Kit	Max opening width (Y)
Z12	1200
Z15	1500
Z18	1800


Recommended maximum
opening height = 1800mm

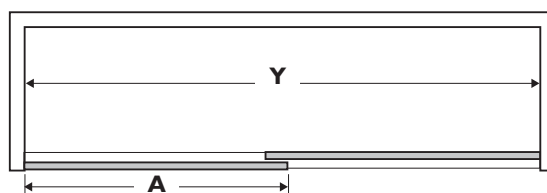


$$A = \frac{1}{2} Y + 16$$

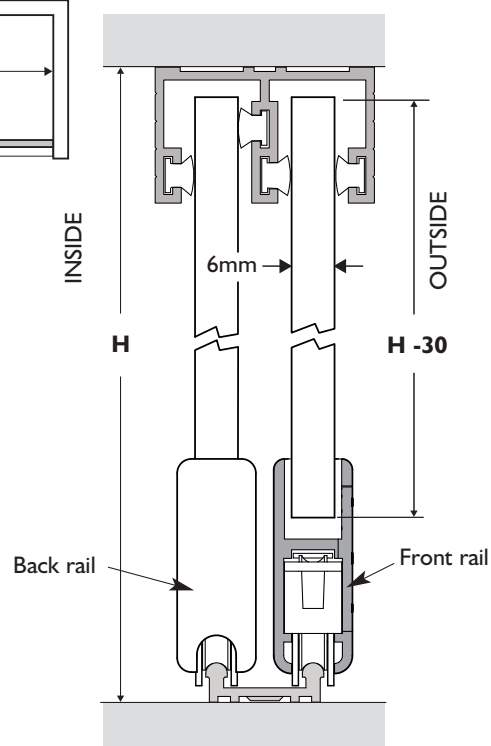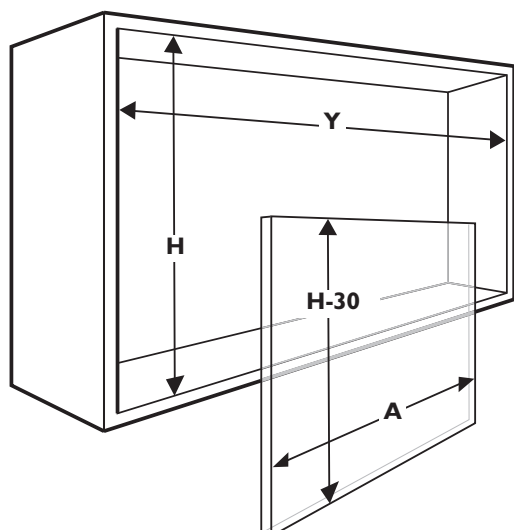


1 Fit glass housing profile.

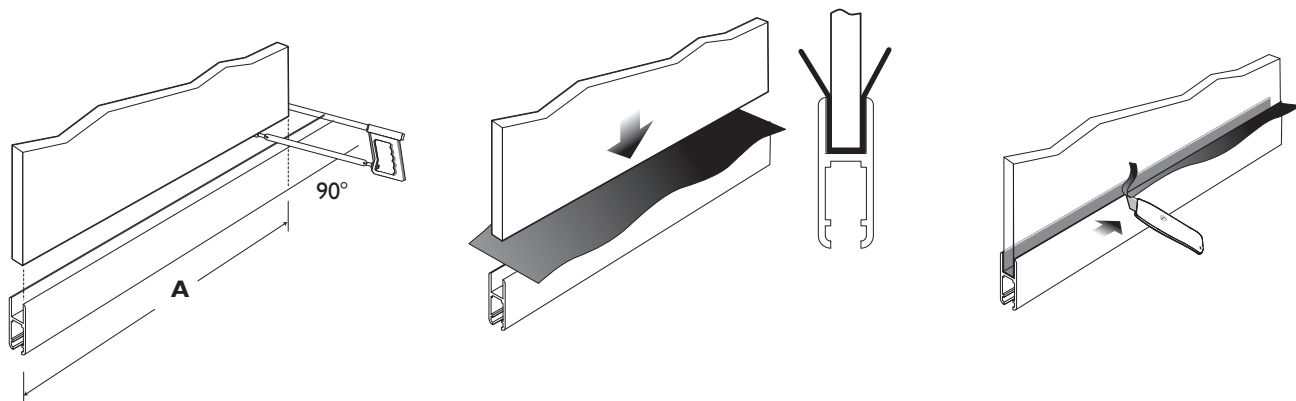


2 Fit bottom rollers and end caps.

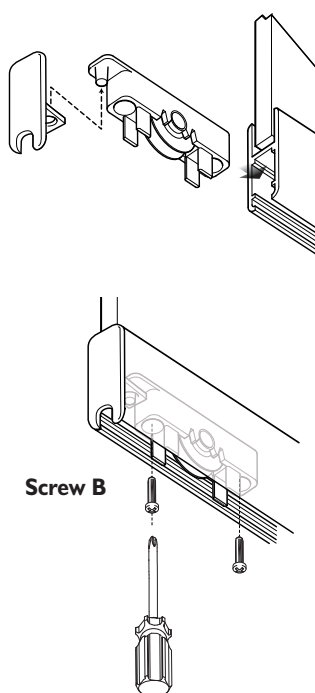


3 Fit Door Locks (optional).

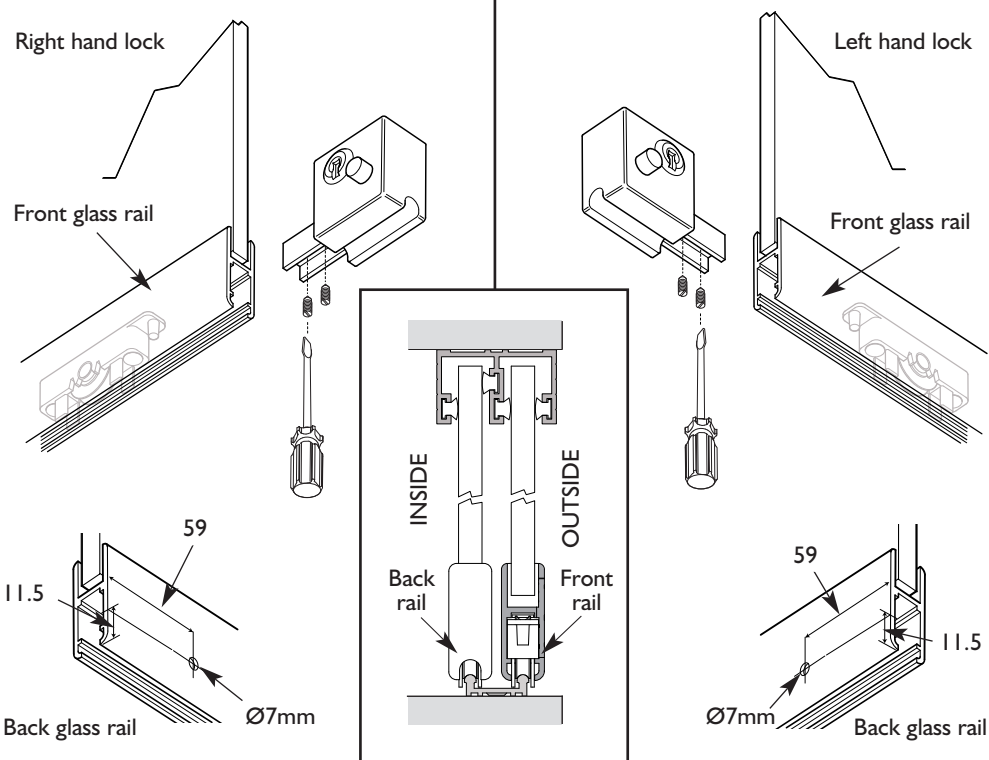


4 Fit bottom and top track.

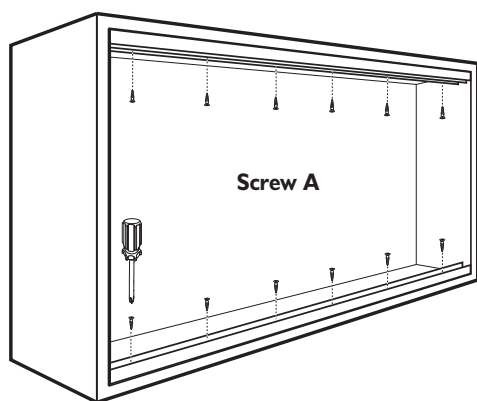

5 Fit doors.

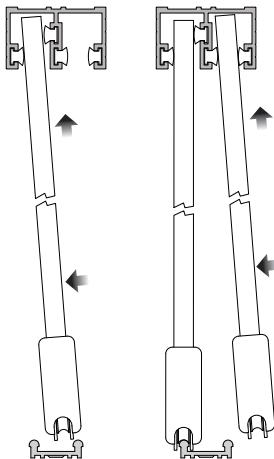

6 Fit finger pulls (optional).

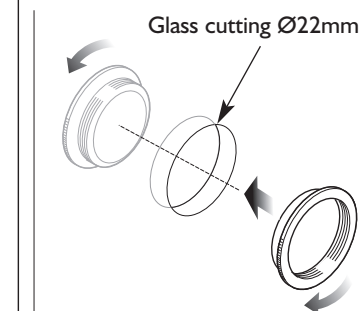

(All dimensions are in mm.)