


ALL PARTS INCLUDED:

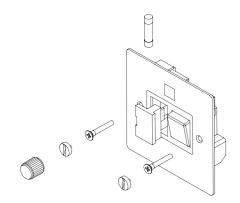

ΕN

TECHNICAL SPECIFICATION

13A DP SWITCHED FCU WITH NEON STYLE:

RATED AT 13A 250V~ AC ONLY (FUSE INCLUDED)

IMPORTANT NOTES

PLEASE READ BEFORE INSTALLING

These products must be installed in accordance with the latest Building and IEE wiring regulations. If in any doubt, please contact a qualified electrician.

BACK BOXES

We recommend you to use a UK back box to install your product. Please note that the minimum recommended depth for the mounting box is 37mm. Back boxes are available to purchase from us, please see recommended sizes below.

PLATE	RECOMMENDED BACK BOX	
1G	1G UK Back box – SKU# ELB921	

WARRANTY INFORMATION

The Warranty Period of Two (2) years from the date of the original purchase.

RECYCLING ELECTRICAL PRODUCTS

Buster and Punch encourages all its customers to make note of this symbol and avoid putting any waste electrical goods in your domestic waste bin or container. Please ensure you take your waste electrical goods to a suitable facility for disposal.



1



BEFORE COMMENCING WORK, ISOLATE THE MAINS POWER SUPPLY AND REMOVE THE FUSE IN THE FUSE BOX OR SWITCH OFF THE CIRCUIT BREAKER IN THE CONSUMER UNIT.



2

If unit is to be used as a replacement for an existing product, remove existing unit from its location and disconnect the wiring.



CAUTION:

Verify power is OFF to switch before proceeding.

3


Certain items in the range will not fit into a 4 lug box. If such a box has been previously installed the top and bottom lugs should be removed or bent back to avoid contact with the interior.

Use a cross head electric or manual screwdriver to fit the special countersunk screws until tight.*



CAUTION:

To reduce the risk of discolouration or tarnishing, avoid installation on wet plaster.

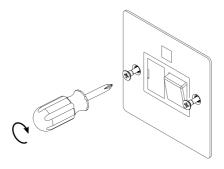


* Please ensure screws are sufficiently tight to support the product but please do not over tighten as this may cause some deformation to the plate or damage the screw.

4

Connect the wires as shown in appropriate wiring diagrams. Use green/yellow sleeving on earth conductors. Ensure terminals are properly tightened and no bare wire is visible. Carefully arrange wiring to lie along the edge of the product or box, keep the central area clear. Push back unit into mounting box making sure conductors are not trapped.

Live (red pre Apr 04 / brown after Apr 04) Neutral (black pre Apr 04 / blue after Apr 04) Earth (yellow and green)

4 A) 13A SWITCHED FUSED CONNECTION UNIT

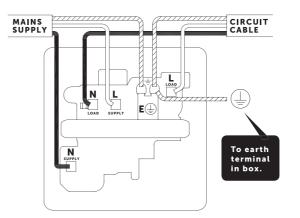


* This fused connection unit is fitted with two linked terminals to provide a dual earth facility. This is for use in "clean earth" installations were additional earth capacity is required to comply with regulation 607 of BS 7671 IET wiring regulations.

By hand, screw the coin caps into the end of the screws. Use


the plastic coin cap tool to fully tighten the coin caps.**

4 B) 13A SWITCHED FUSED CONNECTION UNIT W/FLEX OUTLET

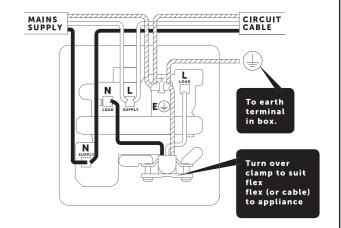

REPLACING THE FUSE:

To avoid damaging the decorative coin cap screws, always remove coin cap when replacing the fuse

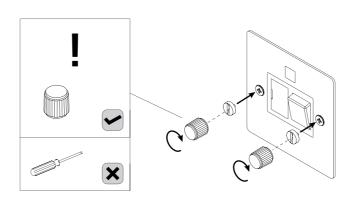



** Do NOT use a standard screw driver to tighten the coin caps. This may damage the cap and is not covered under warranty. Plastic coin cap tool must be used by hand only.







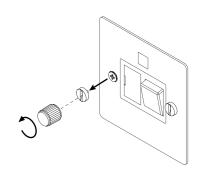



BUSTER + PUNCH TECH SPEC



SWITCHED FUSE SPUR / 13A DOUBLE POLE + NEON

TECH SPEC





SWITCHED FUSE SPUR / 13A DOUBLE POLE + NEON

Sleek & slim with softly rounded corners, the Buster and Punch Electricty range combines functionality with stunning good looks. This product is part of an extensive range that transforms forgotten home fittings into unforgettable items. Available in 5 solid metal finishes.

busterandpunch.com info@busterandpunch.com


BUSTER + PUNCH TECH SPEC

BUSTER + PUNCH TECH SPEC



SWITCHED FUSE SPUR / 13A DOUBLE POLE + NEON

TECH SPEC

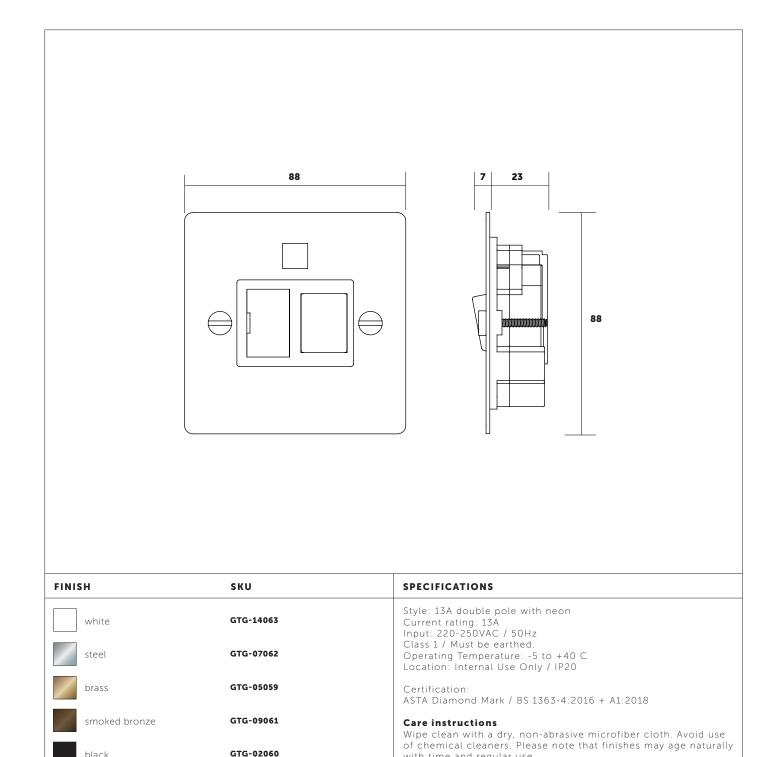

TECH SPEC **BUSTER + PUNCH**

with time and regular use.

black

BUSTER + PUNCH TECH SPEC

SWITCHED FUSE SPUR / 13A DOUBLE POLE + NEON

FAQ SHEET

CATEGORY	QUESTION	ANSWER
APPLICATION	What is a fused spur switch used for?	Use for appliances where isolation is required from the ring main for maintenence or safety purposes. Typically used to isolate higher power appliances that can be wired without a plug, such as ovens, radiators and washing machines, up to 13A.
INSTALL	Can I install a fused spur myself?	We always recommend that our products are installed by a qualified electrician. Always refer to the safety notices within the instruction manual before attempting install.
INSTALL	Will this fit my existing backbox?	1G: W 70mm x H 70mm x D 37mm, square back box. Back boxes can be supplied on request.
MAINTENANCE	Can I easily change the fuse?	The fuse is easily accessible from the front plate. Always replace with a good quality fuse of the correct rating.
CUSTOMISE	Can I customise the appearance of my fused spur?	Lots of our products are customisable with interchangeable penny button screws available in 5 finishes. Please contact one of our sales representatives for custom requirements.

WEEE directive

Regulations require the recycling of waste from Electrical and Electronic Equipment (European 'WEEE Directive' effective August 2005 -UK WEEE regulations effective 2nd January 2007).

Environment Agency Registered Producer: WEE/MM5108AA

When your product comes to the end of its life or you choose to replace it, please recycle it where facilities exist. DO NOT DISPOSE WITH HOUSEHOLD WASTE.

BUSTER + PUNCH TECH SPEC